



Installation Guide for Wes Quick Release System on Outlander 2013 & Wes Classic.

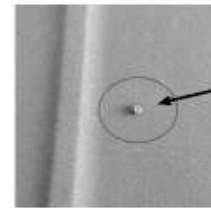

We recommend a 1/2" spade drill bit.

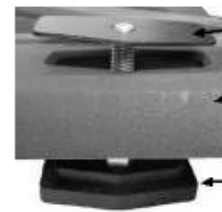

Holding bolt piece.

Rear luggage rack.

Luggage rack anchor.



Knob.



Fender washer.



Wes Classic's bottom lid.



Rear luggage rack with assembled anchor

