



# Installation Guide

## Wes TWIN Box set for Polaris

### #127-0010




#### Before you start:

- 1- Both boxes are completely identical.
- 2- Choose one box that will go on the left side and one on the right side.
- 3- Each box c/w a Wes Quick Release «Lock n' Go» kit (3 per kit)
- 4- This box set fits only on: Polaris Sportsman Touring 850 (2009+) or 550 (2010+) and Polaris Sportsman Touring 570 (2014+)
- 5- Remove the handles from your unit prior to installation

- The left and right side are determined by the position the rider is sitting on the ATV.




#### Step 1: Underneath each box drill 3 holes at the 3 indicated spots:

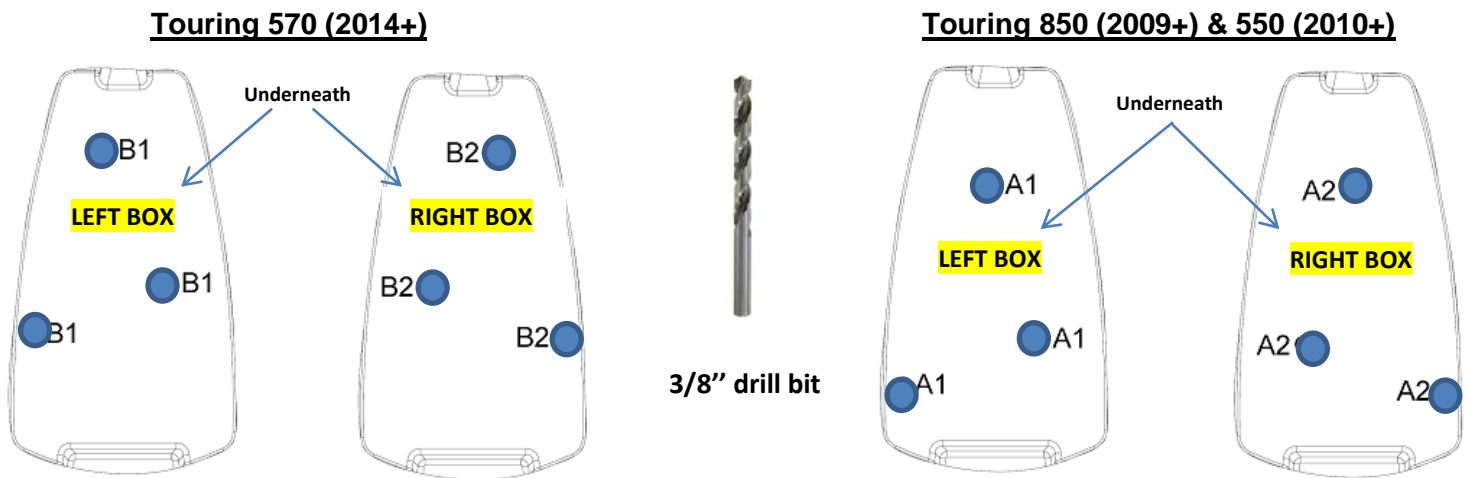

**Step 2:** For each box, insert 3 Quick Releases in the holes made at Step 1.

**Step 3:** Place the left box on the left side of the rear rack and insert all 3 Quick Releases in each hole. Tighten each knob securely. \* Same procedure for right box

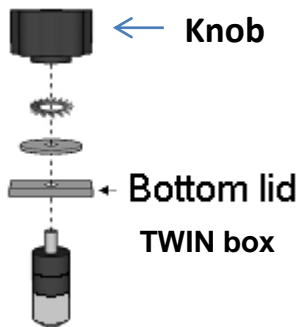

**\* Make sure both boxes are securely fastened to the rear rack before each ride.**

**Warning:** Do not carry any flammable or explosive material / liquid.

**Maintenance:** Clean with mild soap and water only.

**Warranty:** One year from date of purchase or from date of manufacturing (whichever come first)